


CASSOLA CHRONOGRAPH Cal. VD54

INSTRUCTIONS

■ FEATURES

- The Analogue Watch Cal.VD54 is a multi-display watch featuring a stopwatch function.
- The time is indicated by the hour, minute, second and a small 24-hour hands.
 - The stopwatch can measure up to 60 minutes in seconds.

■ DISPLAY AND CROWN/BUTTON OPERATION

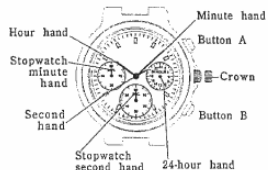

Crown operation

- Normal position : Free
Extended position : Time setting
Adjusting the stopwatch hand position

Button operation

- A : Start/stop of the stopwatch
B : Split time measurement/reset of the stopwatch

■ TIME SETTING



1. Pull out the crown when the second hand is at the 12 o'clock position. The second hand stops on the spot.
2. Turn the crown to set the hour and minute

hands to the desired time.

- The 24-hour hand moves correspondingly with the hour and minute hands. When setting them, therefore, be sure to check that the 24-hour hand is set properly.
 - When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.
3. Push back the crown in to the normal position in accordance with a time signal.


■ HOW TO USE THE STOPWATCH

The stopwatch can measure up to 60 minutes in seconds.


- Before using the stopwatch, make sure that the stopwatch hands return to "0" position when it is reset. (Refer to "STOPWATCH HAND ADJUSTMENT".)




• Standard measurement

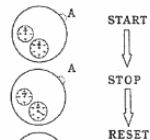


• Accumulated elapsed time measurement

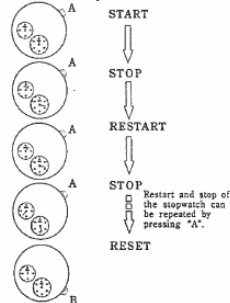

• Split time measurement

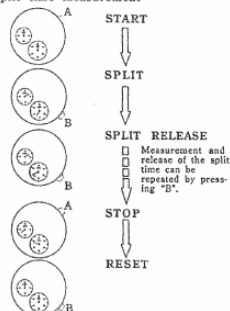


• Measurement of two competitors

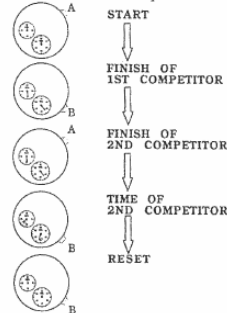

■ STOPWATCH HAND ADJUSTMENT

- If the stopwatch hands do not return to "0" position when the stopwatch is reset by pressing "B", follow the procedure below to reset them to "0" position.

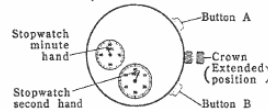

1. Pull out the crown.
2. Press "A" or "B" to reset the stopwatch minute and second hands to the 12 o'clock position.
 - With each press of "A" or "B", the hands move one second counterclockwise or clockwise, respectively. The hands move quickly if the respective buttons are kept pressed.
- If the stopwatch hands move improperly, keep "A" and "B" pressed at the same time for over 2 seconds. When the buttons are released, the stopwatch second hand turns 180° counterclockwise and returns to where it was, indicating that the built-in IC is reset to the normal condition.

■ BATTERY REPLACEMENT

As the battery in your watch is a monitor battery inserted at the factory, its actual life once in your possession may be less than the specified period.
If the battery runs down, be sure to remove it as soon as possible. Do not leave the old battery inside the watch.