

# CHILOMETRI MANUAL



The movement in Chilometri display time and date. There are four windows visual on the dial, the two in centre are the date windows, the other two are only printed graphics to reassemble the kilometer counter on the original speedometer.

This watch has a movement with a date function that is based on 2 different discs, one disc with see-through holes. Please set your watch this way:

## TIME

- Pull out the crown
- Turn the crown to set time

(If you turn the crown clockwise until the date changes you will know that this is midnight and not noon. Then set the time AM or PM. Your date will now change always on midnight)

- Push now the crown back in all the way

## DATE

- Pull out the crown
- Push it back in **half way**
- Turn clockwise to change left window
- Turn Anti clockwise to turn right window  
(Keep turning to the number is centred in the window)
- Push now the crown back in all the way